



MOTOR RESPONSE

To save lower limit, hold both **DOWN** and **STOP**

Move shade to desired lowest position by pressing the **DOWN** arrow.

Hold both **DOWN** and **STOP** on controller.

#### 4. Adjust lower limits



 
MOTOR RESPONSE

To save lower limit, hold both **DOWN** and **STOP**

#### 3. Set lower limit

To save upper limit, hold both **UP** and **STOP**

#### top limit



MOTOR RESPONSE

To reverse shade direction, hold both **UP** and **DOWN** until the motor responds.

#### 2. Change motor direction



MOTOR RESPONSE

Hold **STOP** on controller.




Release **P1** button on motor head.




Hold **P1** button on motor head.

Select channel on controller.

#### 1. Pair motor to remote

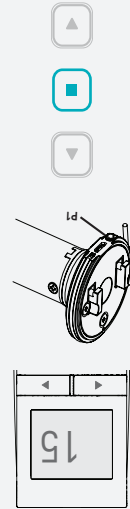

[budgetblinds.com](http://budgetblinds.com)

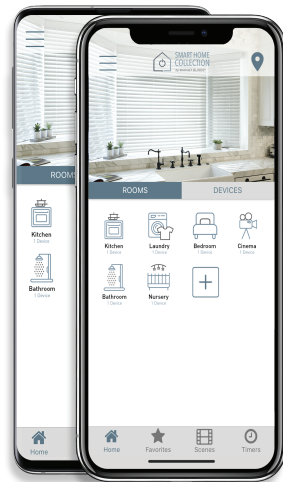

Voice Control



Sunrise & Sunset Detection



Live Feedback

#### ROOMS

Group Automate shades by room and conveniently control them accordingly.



#### SCENES

Personalise shade control and organise how your shades operate by specific daily events.



 
#### TIMERS

Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.



#### MULTIPLE SHADE TYPES


Awnings, Roller shades, External shades, Cellular ... Control every shade type from one screen.




#### Quick Programming Guide




## 5. Adjust upper limits

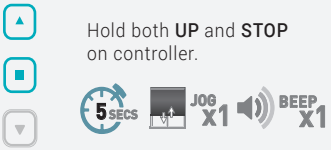

Hold both **UP** and **STOP** on controller.

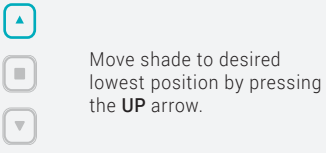

Move shade to desired lowest position by pressing the **UP** arrow.

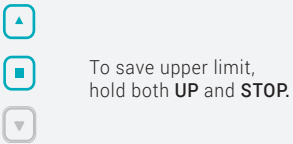


To save upper limit, hold both **UP** and **STOP**.


MOTOR RESPONSE




## 6. Set/Delete a Favorite Position

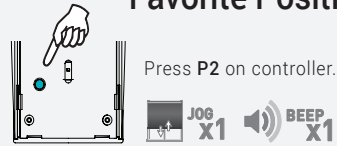

Press **P2** on controller.

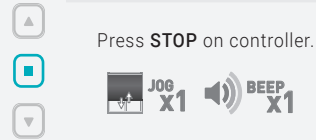

Press **STOP** on controller.

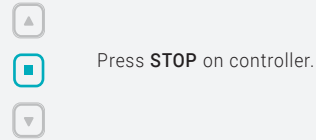

Press **STOP** on controller.


MOTOR RESPONSE



## 7. Create/Delete groups using P2



Press **P2** on controller A.

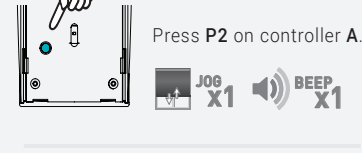

Press **P2** on controller A.



Press **P2** on controller B.


MOTOR RESPONSE




## 8. Adjust Motor Speed



Press **P2** on controller.

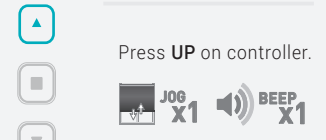

Press **UP** on controller.

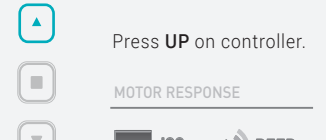


Press **UP** on controller.


MOTOR RESPONSE



## 9. Lock Remote

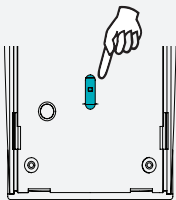


To switch modes, push switch to **LOCK** or **UNLOCK** position.

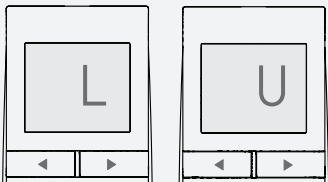

LCD displays "**L**" when locked.

LCD displays "**U**" when unlocked.

## 10. Hide Channels

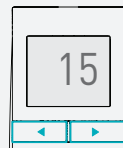


Press and hold both channel scroll buttons together until 15 appears on the screen.



scroll with the left arrow from ch 15 until you reach the last channel that you want to see (example 5) confirm by pressing stop Ch 1 -5 will only be visible




## 11. Factory Reset

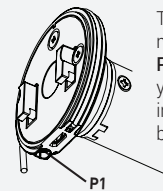

To reset all settings in the motor press and hold the **P1 Button** for **14 seconds**, you should see 4 independent jogs followed by 4x Beeps at the end.

MOTOR RESPONSE

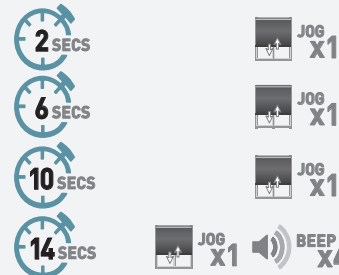

## Integrations

VOICE CONTROL INTEGRATIONS



SMART HOME INTEGRATIONS

