

Programming Guide





▲ WARNING: Important safety instructions to be read before installation and use.

Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty. It is important for the safety of persons to follow the enclosed instructions

Save these instructions for future reference.

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- or extreme temperatures.

 Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably nualified installe
- Follow installation instructions.
- For use with motorized shading devices.
- Frequently inspect for improper operation
- Do not use if repair or adjustment is necessary.
- Keep clear when in operation
- Replace battery with correctly specified type.





resulting in chemical burns.

Battery: CR2450 | 3VDC

- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate.

 Doing so may result in injury due to venting, leakage or explosion
- Ensure the batteries are installed correctly according to polarity
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Do NOT dispose of batteries in household trash or incinerate.

▲ WARNING

NGESTION HAZARD: This product contains a button cell or coin battery. DEATH or serious injury can occur if ingested.

A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.

KEEP new and used batteries OUT OF REACH of CHILDREN
Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



FCC & ISED STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes

 L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequencyenergy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician

INSTALLER

Please refer to separate Rollease Acmeda System Assembly Manual for full assembly structions relevant to the hardware system being used.

BATTERY MANAGEMENT

ASSEMBLY

Prevent discharging the battery completely

for extended periods, recharge as soon as the battery is discharged CHARGING NOTES

Charge your motor for 6-8 hours, depending on the motor model, as per motor instructions



During operation, if battery is low, the motor will been 10 times to prompt the user it needs charging.

BEST PRACTICE AND TIPS

SLEEP MODE

If pre-programmed: before shipping the motor ensure the motor is put into sleep mode so it doesn't activate during transit.

LOCK REMOTE

Prevent users accidently changing the limit; ensure the remote is locked as your last step of programming.

ZONE / GROUPS

Ask the customer the day before to think how shades will be zoned on the remote. This may save an extra call out.

SETTLE FABRIC

Run the fabric up and down several times to ensure fabric has settled to some extent and re adjust the limits if needed.

CHARGE 100%

For battery motors ensure the motor is fully charged as per instructions

INSTALLERS REMOTE

Use a spare remote to individually program each shade. Then use that remote to group rooms as per the user's needs. If you go back and service the installation later then, that same remote can be used to check the individual shades.

PRODUCT RANGE

The Quick Start Programming Guide is universal for all Automate Motors including







Versa Drapery Motor



Note: Curtain motor does not Jog but instead LED flashes



P1 LOCATIONS

Versa Drapery Motor

Large Tubula






Tilt Motor

QUICK START PROGRAMMING


STEP 1 ON REMOTE

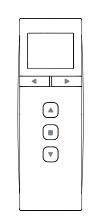

→ OR →

Press ∢ or ▶ buttons to select the channel that needs to be programmed

PAIRING REMOTE

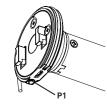



* Internal Tubular pictured. Refer to "P1 Locations" for specific devices

Press the P1 button on the motor for 2 Seconds until the motor responds

The motor will respond with 1x Jog & 1x Beep

Within 4 seconds hold the stop button on the remote until the motor responds as below:



MOTOR RESPONSE







2 SECS



 \blacksquare



BEEP x1

Reversing motor direction using this method is only possible during initial set-up.











Press up or down to check the motor direction. If correct skip to step 5.





MOTOR RESPONSE

If the shade direction needs to be reversed; press and hold the up & down arrow together Move shade to desired top limit by for 2 seconds until the motor Joas pressing the up arrow repeatedly. Then press and hold up & stop together 2 seconds to save limit.



STEP 5 SET UPPER LIMIT

2 SECS

Tap the arrow several times or hold down if needed; press arrow to stop

STEP 6 SET BOTTOM LIMIT


This setup wizard should be used for new installation or factory reset motors only.

Individual steps may not work if you haven't followed the wizard from the beginning







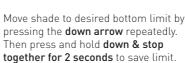



Tap the arrow several times or hold down if needed; press arrow to stop.

x3








Repeat steps 1-6 for all motors. Once complete Push the swithc up to lock the remote, the \boldsymbol{L} will breifly appear on the screen



FACTORY RESET MOTOR RESET PROCEDURE

To reset all settings in the motor press and hold the P1 Button for 14 seconds, vou should see 4 independent joas followed by 4x Beeps at the end.

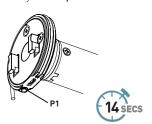

* Internal Tubular pictured above. Refer to "P1 Locations" for specific devices

MOTOR RESPONSE



START GUIDE


QUICK


PROGRAMMING

ADVANCED



BUTTON OVERVIEW

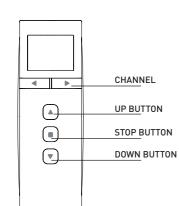

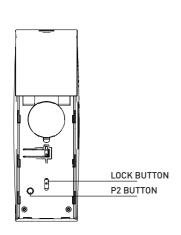


REPLACE BATTERY

Remove Battery Isolation Tab





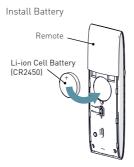

WALL MOUNTING



Use supplied fasteners and anchors to attach the base to wall.

HIDE SPARE CHANNELS



Press and hold both channel scroll buttons together until the c appears on the screen.



scroll with the left arrow from ch 13 until you reach the last channel that you want to see (example 5) confirm by pressing stop Ch 1 -5 will only be visible

STEP 2. Press STOP on controller

MOTOR RESPONSE

JOG

BEEP

SELECTING A CHANNEL

STEP 1




Press left and right arrow; to scroll through channels as required.

STEP 2

READY FOR CONTROL


Now while the channel is active follow the control instructions.

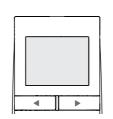

if no button is pressed within 4 seconds, the channel slection will automatically be confirmed.

GROUP CONTROL

Channel "0" is pre-set to control ALL shades paired to your Muli-channel remote.

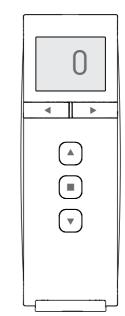

CONTROLLING A SHADE

CONTROL SHADE UP OR DOWN









While the channel is displayed press up or down to move shade accordingly

STOPPING THE SHADE







Press the stop button to stop shade at any point

Note: Tools are not provided with the remote.

Repeating these steps after creating a favorite position will delet it.

Move shade to desired position by













STEP 3. Press STOP on controller








 $\overline{\mathbb{V}}$






CREATE CUSTOM GROUPS

It is possible to copy one channel to another channel to create custom groups

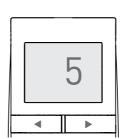

Select the channel you want to transfer

STEP 1. Press P2 on existing controller

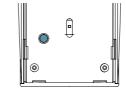


MOTOR RESPONSE





STEP 2. Press P2 again on existing controller

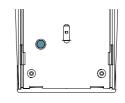

MOTOR RESPONSE

Step 3 to be completed

within

4 seconds of Step 2





STEP 3. Press P2 on new controller

Select the channel on the new controller


◀



•

MOTOR RESPONSE




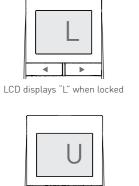




This mode is intended to be used after all shade programming is completed. User Mode will prevent accidental or unintended changing of limits.

> Push switch to lock or unlocked position

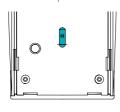



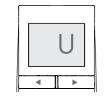

LCD displays "U" when locked

SET A FAVORITE POSITION

pressing **UP** or **DOWN** on the remote.









OR







MOTOR RESPONSE





