

enlightened  
style™

The Smart Choice for Your Windows.

EXCLUSIVELY BUDGET BLINDS®

# HONEYCOMB SHADES

## BRACKET AND HEADRAIL MOUNTING GUIDE

Take to the window to determine headrail placement

### LARGE HEADRAIL

#### Inside Mount (IB)

Minimum Mounting Depth: 1-1/2"

Minimum Mounting Depth (Flush Mount) 3"

#### Outside Mount (IB)

Minimum Mounting Surface: 1-1/2"

Recommended width overlap (per side): 2"\*

\* 3" if battery pack is to be mounted on the back of the headrail

### PREMIUM HEADRAIL

#### Inside Mount (IB)

Minimum Mounting Depth: 3/4"

Minimum Mounting Depth (Flush Mount): 2-1/4"

#### Outside Mount (IB)


Minimum Mounting Surface: 1-1/2"

Recommended width overlap (per side): 2"\*

\* 3" if battery pack is to be mounted on the back of the headrail

**Note:** When a motorized system is selected, please consider the added mounting depth needed if the battery pack is mounted on the back of the headrail.

**Note:** Due to the unique construction of the fabric, when a shade using Dimensions is made on either the Premium or Deluxe rail, it will extend approx 1/2" behind the headrail when stacked. Please add 1/2" to the minimum mounting depth on these applications and consider adding spacer blocks or extension brackets to your order.

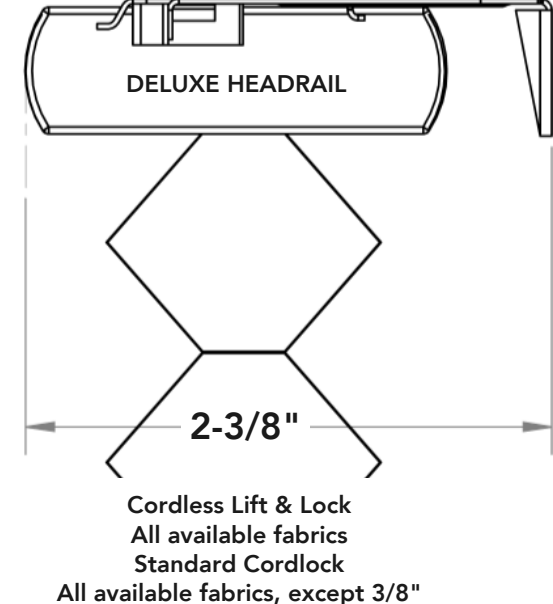

### DELUXE HEADRAIL

#### Inside Mount (IB)

Minimum Mounting Depth: 2"


Minimum Mounting Depth (Flush Mount): 2-3/8"

#### Outside Mount (IB)

Minimum Mounting Surface: 3/4"

Recommended width overlap (per side): 2"

**SMALL DELUXE HEADRAIL**  
Standard Cordlock  
3/8" fabrics

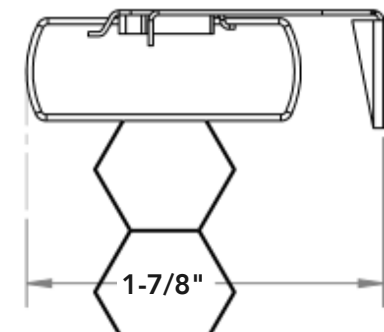

### SMALL DELUXE HEADRAIL

#### Inside Mount (IB)

Minimum Mounting Depth: 3/4"

Minimum Mounting Depth (Flush Mount): 1-7/8"

#### Outside Mount (IB)

Minimum Mounting Surface: 3/4"

Recommended width overlap (per side): 2"