


Getting Started — Mounting Type

All of the required installation components are wrapped in the package along with these instructions. Please thoroughly review these instructions before beginning the installation. *Some parts may vary depending upon your selected mounting options or control system options.*

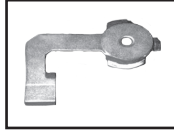


**2 and 3 Way
Inside/Outside Mount
Installation Bracket**




**4 and 4 Way
Inside/Outside Mount
Installation Bracket**




**L Bracket
Outside/Wall Mount**

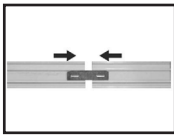

**Track Splice Bracket
(for tracks over 144" wide)**

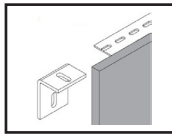

**Installation Bracket
(Outside Mount Only)
Slotted Angle Bracket**

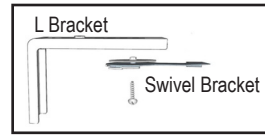

**Outside/Wall Mount
Bracket Assembly**

If the installation brackets are mounted correctly, the rest of the installation process will follow easily.
Prior to mounting the brackets, add any clearance depth required to avoid obstructions:

Mounting Depth Requirements					
Number of Track Channels	IM Flush Mount Depth	IM with Valance Flush Mount Depth	IM Minimum Depth	OM Wall Clearance	OM Overall Projection
2	2-1/2"	3-1/2"	1-3/4"	2-1/2" – 3-1/8"	4-1/8" – 4-3/4"
3	2-3/4"	3-3/4"	1-3/4"	2-1/2" – 3-1/8"	4-1/2" – 5-1/4"
4	3-1/2"	4-1/2"	1-3/4"	2-1/2" – 3-1/8"	5-1/4" – 6"
5	3-1/2"	4-1/2"	2"	1-3/4" – 4"	5-1/8" – 7-3/8"


Fasteners

- #8 screws for wood or aluminum
- Plastic inserts for drywall or plaster
- Auger threaded metal or plastic inserts for drywall
- Molly bolts for drywall
- Toggle bolts for drywall or lath & plaster



IMPORTANT: For installation in wood or aluminum frames, it is recommended you use the sheet metal screws included with your custom shades. For other types of wall or window construction you will need to furnish different fasteners.


Note: Fastener strength should be rated more than the weight of the shade.

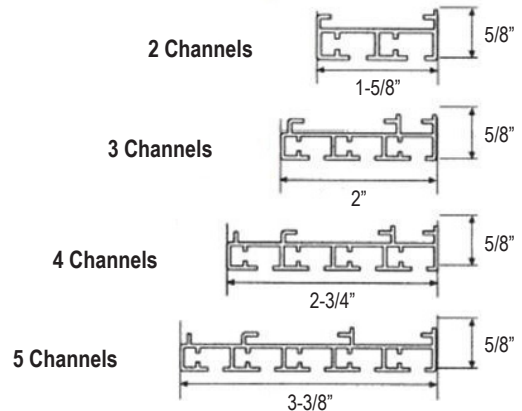

Panel Track hardware installation brackets are either 2 and 3 or 4 and 5 way.
Mounting the brackets level is essential to proper operation.


INSTALLATION INSTRUCTIONS

Inside or Ceiling Mount

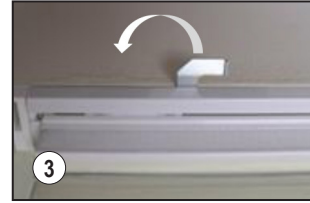


(1) Mark the bracket location. Measure 4" from the edge of the window frame (or edge of the track for ceiling) on each side and mark the location. Space the additional installation brackets evenly between the 2 end brackets and mark the location(s). Make sure that the brackets are level with each other. Verify adequate clearance allowance is made for panel operation. **(2) Mount the brackets.** Place the bracket(s) against the top of the window frame (or ceiling) and attach using the provided screw(s). **(3) Attach the track.** Position track in place where it is centered in the window and the operating wand is on the correct side. Hook front of track onto the lip of the bracket and snap back of track into back of bracket.

Outside and Wall Mount

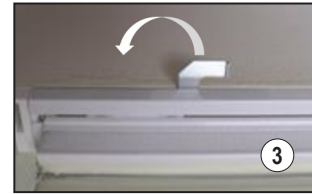

(1) Mark the bracket location. Measure 4" from the edge of the window frame (or edge of the track for ceiling) on each side and mark the location. Space the additional installation brackets evenly between the 2 end brackets and mark the location(s). Make sure that the brackets are level with each other. Verify adequate clearance allowance is made for panel operation. **(2) Mount the brackets.** Place the wall-mount bracket(s) assembly against the top of the window frame and attach using the provided screw(s). **(3) Attach the track.** Position track in place where it is centered in the window and the operating wand is on the correct side. Hook front of track onto the lip of the bracket and snap back of track into back of bracket.


Mounting the Panels

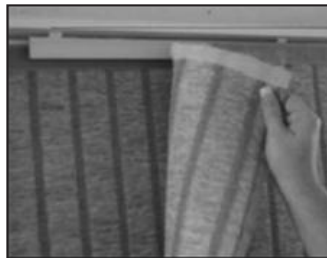

First, unpack each panel and align the Velcro strip on the fabric to the one on the carrier. Then, starting from one end, start pressing the fabric against it until the panel is secured. Repeat this process until all panels are in place.



INSTALLATION INSTRUCTIONS

Mount the Fabric Cornice — INSIDE MOUNT

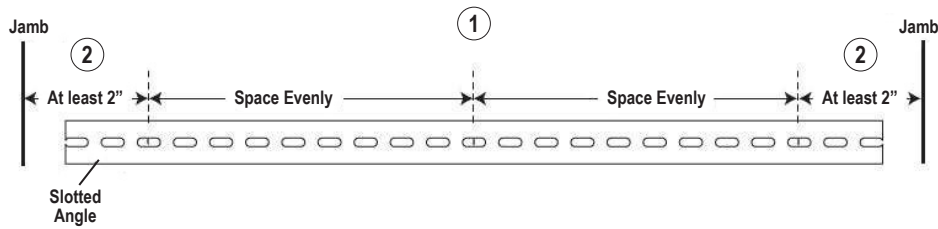

Inside Mount Screws Required	
Width	# of Screws
12" – 28"	3
28-1/8" – 52"	4
52-1/8" – 76"	5
76-1/8" – 100"	6
100-1/8" – 120"	7
120-1/8" – 144"	8

Mounting depth requirement: 1"
Flush mounting depth requirement: 1-1/2"


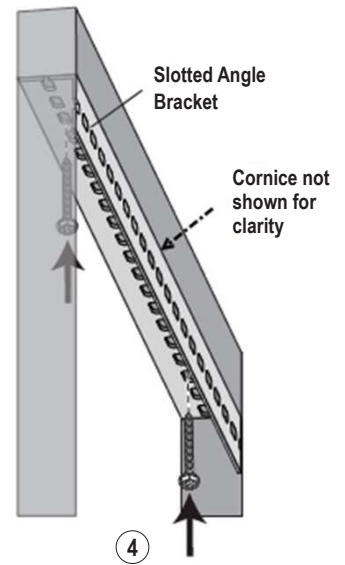
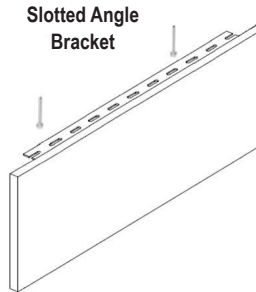


(1) Center the cornice in desired location. (2) Mark the mounting surface 2" from each jamb for screw location. Center the marks in the bracket slots. *Space screws evenly, but no more than 24" apart.* (3) Drill screw holes. **IMPORTANT:** Use drywall anchors when mounting into drywall. (4) Install the cornice through the slotted angle bracket to the mounting surface with the #8 x 1-1/4" screws provided.

INSTALLATION INSTRUCTIONS

Mount the Fabric Cornice — OUTSIDE MOUNT



Min. Mounting Surface Height Requirement: 2"

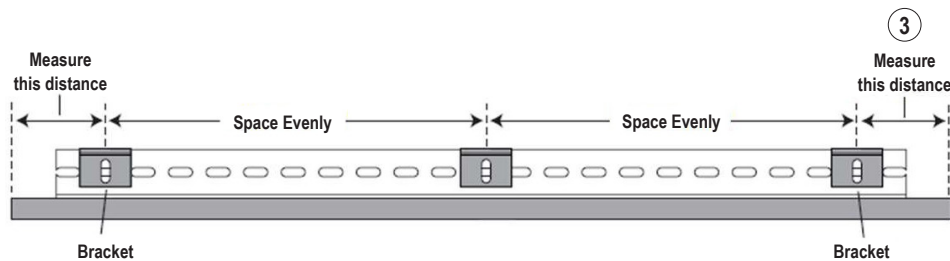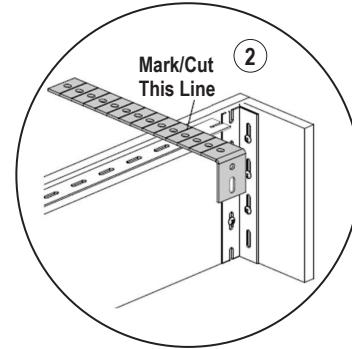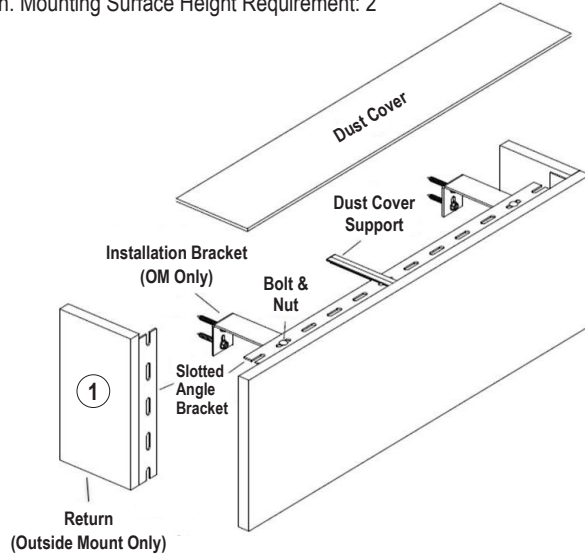

Outside Mount Screws Required

Width	# of Screws
12" – 28"	2
28-1/8" – 52"	3
52-1/8" – 76"	4
76-1/8" – 100"	5
100-1/8" – 120"	6
120-1/8" – 144"	7

Use the distance measured in the previous step

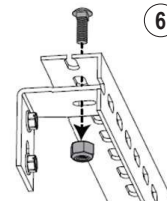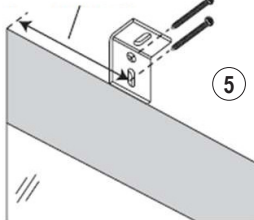

Cornice not shown for clarity

(1) Attach the returns to the valance. Check the angle on each return, fasten screws into the valance and repeat for opposite return.

(2) Skip to next step if ordered with a shade. If ordered custom returns under **Fabric Cornice Only (without shade)**, place the 8" bracket on top of the slotted angle next to the return. With the back of the bracket flush with the back edge of the return, mark the cut mark just past the screw hole that lines up with the slotted angle. Then cut the bracket at the mark.

(3) Measure distance from top edge of cornice to the first complete hole in the slotted angle. Use that measurement to mark the location for the first bracket at the desired height. Repeat for the opposite bracket. *Space brackets evenly, but no more than 24" apart.* (4) Drill screw holes. **IMPORTANT: Use drywall anchors when mounting into drywall.** (5) Attach the installation brackets with the screws provided. Ensure the mounting surface is level and brackets are aligned. Shim brackets, if needed. (6) Using the bolts and nuts provided, attach the slotted angle on top of the installation brackets.

INSTALLATION INSTRUCTIONS

Operate the Panel Track



Tracks operate with a wand draw.

Child Safety

⚠ WARNING

STRANGULATION HAZARD –
Young children can be strangled by cords.

Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible. Rev 7/21 Print 7/21

⚠ MISE EN GARDE

RISQUE D'ÉTRANGLEMENT–
Les enfants en bas âge


peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.

Premiers Pas — Type de montage

Toutes les pièces nécessaires à l'installation sont comprises dans l'emballage de votre produit. Prenez le temps de vous familiariser avec ce livret d'instructions avant de commencer l'installation. Selon vos options de montage, il se peut que les pièces varient. Par exemple, en fonction du système de commande que vous utilisez.




Support d'installation
pour montage intérieur
et extérieur,
2 ou 3 pistes

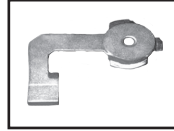


Support d'installation
pour montage intérieur
et extérieur,
4 ou 5 pistes




Support en L
Montage extérieur ou
sur le mur

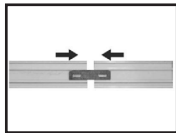

Support de raccord de piste
(pour les stores de plus de
144 po de largeur)

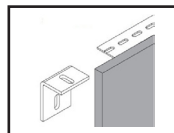

Support d'installation
(montage extérieur seulement)
et support en coin à fentes

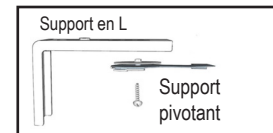

Matériel de montage
extérieur et mural

Si les supports d'installation sont montés correctement, le reste de l'installation s'effectuera facilement. Avant d'installer les supports, ajoutez suffisamment d'espace, au besoin, pour éviter les obstructions :

Exigences pour la surface de montage

Nombre de pistes	Profondeur pour montage intérieur encastré	Profondeur pour montage intérieur encastré avec cantonnière	Profondeur intérieure minimale	Espace nécessaire sur le mur, montage extérieur	Retrait total, montage extérieur
2	2 1/2 po	3 1/2 po	1 3/4 po	2 1/2 po à 3 1/8 po	4 1/8 po à 4 3/4 po
3	2 3/4 po	3 3/4 po	1 3/4 po	2 1/2 po à 3 1/8 po	4 1/2 po à 5 1/4 po
4	3 1/2 po	4 1/2 po	1 3/4 po	2 1/2 po à 3 1/8 po	5 1/4 po à 6 po
5	3 1/2 po	4 1/2 po	2 po	1 3/4 po à 4 po	5 1/8 po à 7 3/8 po


Matériel de fixation

- Vis n° 8 pour le bois ou l'aluminium
- Chevilles d'ancrage en plastique pour cloisons sèches ou murs en plâtre
- Chevilles autotaraudeuses en métal ou en plastique
- Boulons à gaine d'expansion
- Boulons à ailettes



REMARQUE IMPORTANTE : Pour l'installation dans les cadres en bois ou en aluminium, il est recommandé d'utiliser les vis à tête fournies avec le produit. Pour tout autre type de mur ou de fenêtre, vous aurez besoin de matériel de montage différent.

Remarque : Le calibre du matériel de montage utilisé devrait être supérieur à celui du poids indiqué pour vos stores.

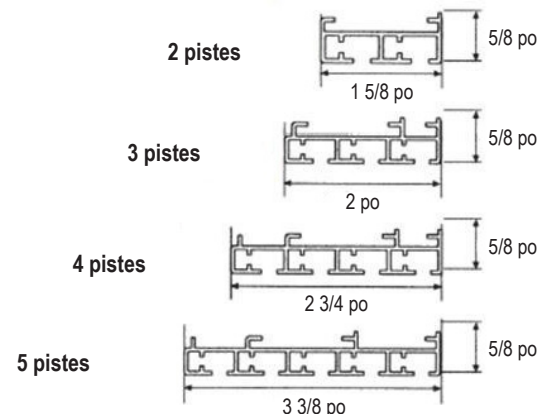

Les supports d'installation pour panneaux coulissants peuvent inclure 2 et 3 ou 4 et 5 pistes.

Il est crucial d'installer les supports de niveau afin de s'assurer que le store fonctionne correctement.

INSTRUCTIONS D'INSTALLATION

Montage intérieur ou au plafond



(1) Marquez la position des supports. Faites une marque au crayon à mine à 4 po de l'extrémité du châssis (ou du bord de la piste, pour les montages au plafond) de chaque côté. Placez les autres supports à une distance égale entre les deux supports d'extrémité et marquez leur position au crayon. Assurez-vous que les supports sont de niveau et correctement alignés les uns avec les autres. Assurez-vous d'avoir suffisamment d'espace pour ouvrir et fermer le store correctement. **(2) Installer les supports.** Placez le support sur le haut du châssis (ou le plafond, le cas échéant) et fixez-le en place à l'aide des vis fournies. Répétez cette étape pour tous les supports. **(3) Fixer la piste.** Placez la piste de manière à le centrer sur la fenêtre et pour que les commandes soient du côté désiré. Placez l'avant de la piste sur la lèvre du support, puis poussez-le vers l'arrière pour l'enclencher en place.

Montage extérieur ou mural




(1) Marquez la position des supports. Faites une marque au crayon à mine à 4 po de l'extrémité du châssis (ou du bord de la piste, pour les montages au plafond) de chaque côté. Placez les autres supports à une distance égale entre les deux supports d'extrémité et marquez leur position au crayon. Assurez-vous que les supports sont de niveau et correctement alignés les uns avec les autres. Assurez-vous d'avoir suffisamment d'espace pour ouvrir et fermer le store correctement. **(2) Installer les supports.** Placez le support pour montage mural sur le haut du châssis et fixez-le en place à l'aide des vis fournies. Répétez cette étape pour tous les supports. **(3) Fixer la piste.** Placez la piste de manière à le centrer sur la fenêtre et pour que les commandes soient du côté désiré. Placez l'avant de la piste sur la lèvre du support, puis poussez-le vers l'arrière pour l'enclencher en place.

Monter les panneaux



Tout d'abord, déballez les panneaux et alignez les bandes de velcro du tissu avec celle de la porteuse. Ensuite, En commençant d'une extrémité, fixez le panneau de tissu en place. Répétez cette étape pour tous les panneaux.



Monter la corniche — MONTAGE INTÉRIEUR SEULEMENT

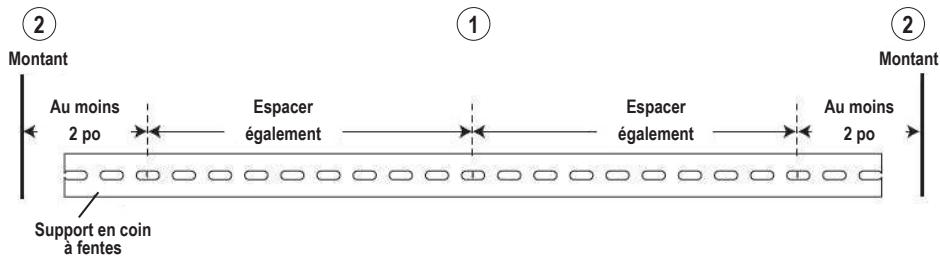

Nombre de vis requises, montage intérieur

Largeur	Nombre de vis
12 po à 28 po	3
28 1/8 po à 52 po	4
52 1/8 po à 76 po	5
76 1/8 po à 100 po	6
100 1/8 po à 120 po	7
120 1/8 po à 144 po	8

Exigences pour la surface de montage : 1 po
Profondeur pour montage encastré : 1 1/2 po


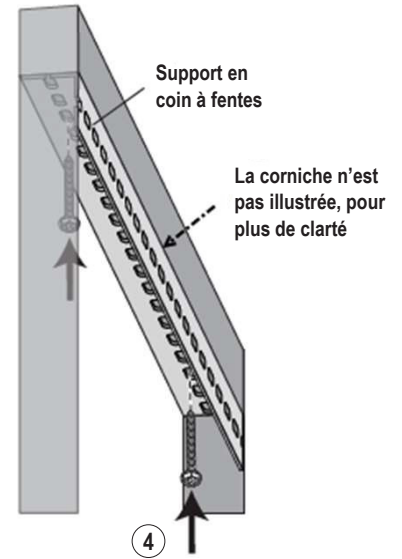
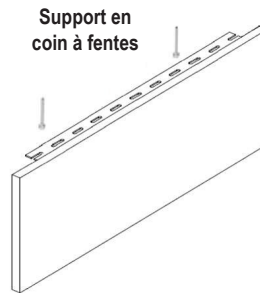


(1) Centrez la corniche à la position désirée. **(2)** Faites une marque à 2 po de chaque montant aux extrémités pour les vis. Faites une marque au crayon sur la surface de montage. Alignez les marques avec les trous des supports. Placez les vis à distance égale, mais à un maximum de 24 po de distance. **(3)** Percez les trous pour les vis. **IMPORTANT** : Si vous montez le store sur une cloison sèche, utilisez des chevilles d'ancrage. **(4)** Installez la corniche sur le support en coin à fentes à l'aide des vis no 8 de 1 1/4 po fournies..

INSTALLATION INSTRUCTIONS

Mount the Fabric Cornice — OUTSIDE MOUNT



Min. Mounting Surface Height Requirement: 2"

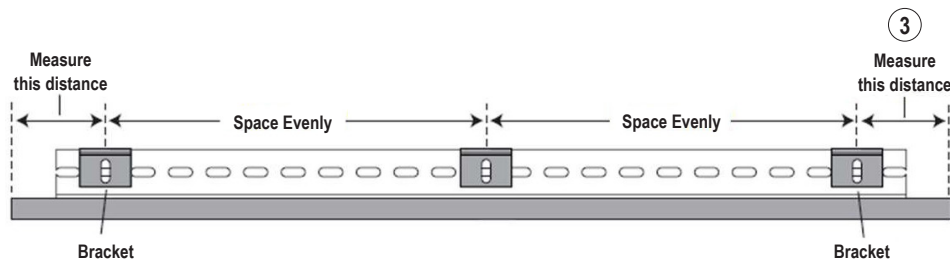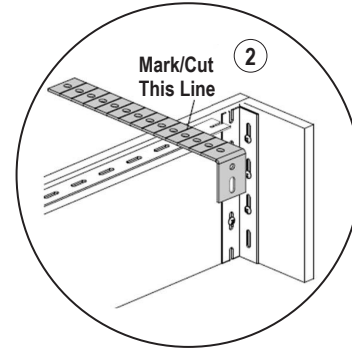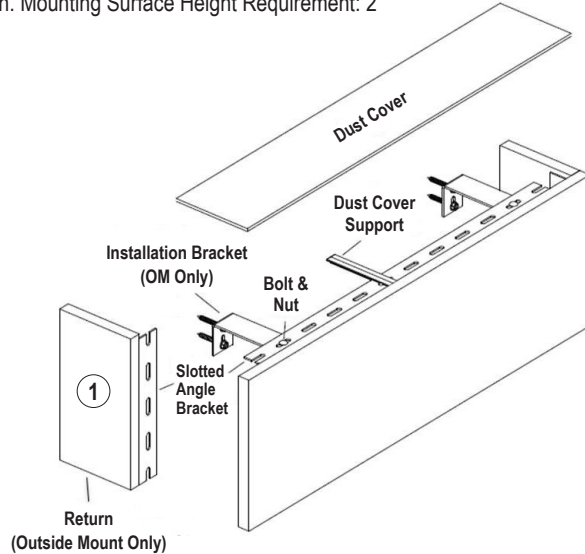

Outside Mount Screws Required

Width	# of Screws
12" – 28"	2
28-1/8" – 52"	3
52-1/8" – 76"	4
76-1/8" – 100"	5
100-1/8" – 120"	6
120-1/8" – 144"	7

Use the distance measured in the previous step

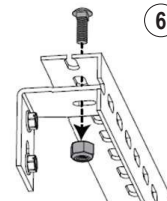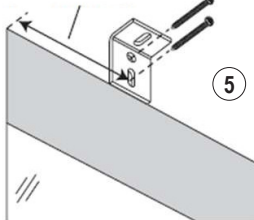

Cornice not shown for clarity

(1) Attach the returns to the valance. Check the angle on each return, fasten screws into the valance and repeat for opposite return.

(2) Skip to next step if ordered with a shade. If ordered custom returns under **Fabric Cornice Only (without shade)**, place the 8" bracket on top of the slotted angle next to the return. With the back of the bracket flush with the back edge of the return, mark the cut mark just past the screw hole that lines up with the slotted angle. Then cut the bracket at the mark.

(3) Measure distance from top edge of cornice to the first complete hole in the slotted angle. Use that measurement to mark the location for the first bracket at the desired height. Repeat for the opposite bracket. Space brackets evenly, but no more than 24" apart. (4) Drill screw holes. **IMPORTANT: Use drywall anchors when mounting into drywall.** (5) Attach the installation brackets with the screws provided. Ensure the mounting surface is level and brackets are aligned. Shim brackets, if needed. (6) Using the bolts and nuts provided, attach the slotted angle on top of the installation brackets.

INSTRUCTIONS D'INSTALLATION

Ouvrir et fermer le store



Le store fonctionne à l'aide d'une baguette de commande.

Sécurité des enfants

WARNING

STRANGULATION HAZARD –
Young children can be strangled by cords.

Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible. Rev 7/21 Print 7/21

MISE EN GARDE

RISQUE D'ÉTRANGLEMENT –
Les enfants en bas âge

peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.



C8-10-4455